


# PRODUCT INFORMATION

# COMMERCIAL/INDUSTRIAL

## PANEL FASTENER LOCATIONS (Interior of Panel)

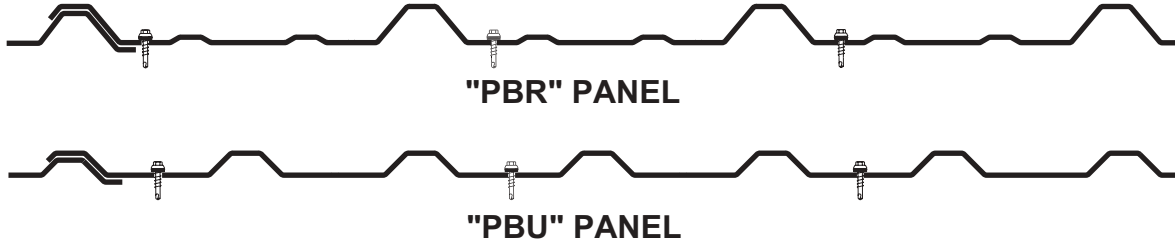

### NOTES:

1. "PBR", "PBU" have unsymmetrical purlin bearing side lap legs. (Panel Side lap with extended foot to bear on framing)  
However, where possible, the panel should be lapped against prevailing wind.
2. The above are typical fastener spacings. However, they may not be appropriate for all applications. Consult a professional engineer for use on any specific application.
3. Minimum  $\frac{1}{2}$ " X  $\frac{3}{32}$ " tape sealer required at panel side laps when used as roof panels.
4. Side lap fasteners are required. Typical spacing is 20" O.C. However, this spacing may not be appropriate for all applications. Consult a professional engineer for use on any specific application.